

Compatible with Magnification Rings with a Diameter of 1.739 Inches (44 mm)

Installation Instructions

Attention: Ensure firearm is completely unloaded before making any modification.
Unload, check inside the chamber, and remove any ammunition from the area.

- Properly mount your riflescope and have the Switchview ring, lever, screw, wrench, and some lubricant available.
- 2. Find the center of travel on your riflescope's magnification adjustment ring and place a small mark at this point as a reference for positioning (Step 6).
- 3. Apply one drop of lubricant to the ball of the Switchview ring.
- 4. Slide the Switchview ring over the eyepiece and onto the magnification ring.
 - Gently spread the ring apart—just far enough to get it over the eyepiece and/or around the illumination knob.
- Carefully insert the ball of the Switchview ring into the socket of the lever by GENTLY working the lever onto the lubricated ball.
 Note: Precise tolerances ensure the ball and socket fit together very tight.
- 6. Insert the Allen Screw through the unthreaded hole in the lever and into the ring (3-A) and tighten only until SNUG and doesn't slip when rotated. If you use a torque wrench, tighten to 2.2 inch-pounds. When properly installed, a gap will remain between the two parts at the screw connection. Caution: Do not over-tighten.

 Over-tightening may cause damage to the Switchview and/or riflescope.
- 7. Test to ensure the Switchview lever is in the best position for you. To adjust, simply loosen the screw and reposition the lever to a more comfortable position. Then, retighten the screw and test the new position.




Vortex Optics 2120 W. Greenview Dr. Middleton, WI 53562

www.vortexoptics.com



Switchview™ is a trademark of Mike Gibson Manufacturing, Inc.

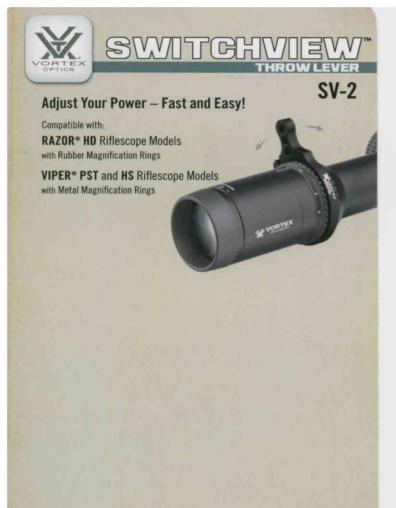

Made in the USA